




www.colorato.net


INSTRUCTION MANUAL OF GAS HEATER

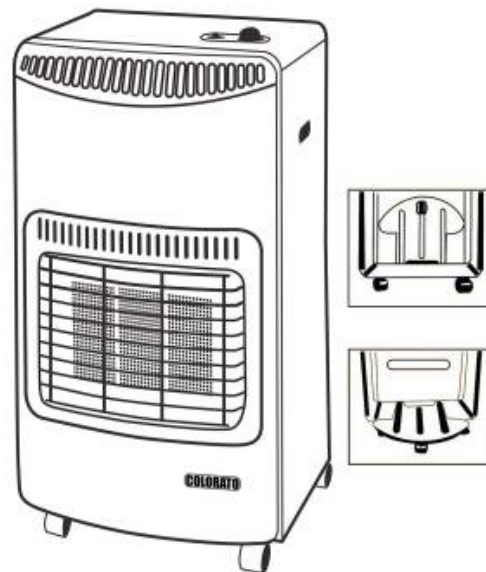


MODEL: CLGH-42E

THE GUARD ON THE APPLIANCE IS TO PREVENT RISK OF FIRE OR INJURY FROM BURNS AND NO PARTS OF IT SHOULD BE PERMANENTLY REMOVED


SAFETY PRECAUTIONS:

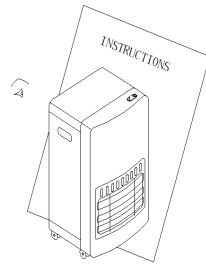


1. Always use Heater in accordance with user's instructions supplied with each heater. Keep these instructions in a safe place.

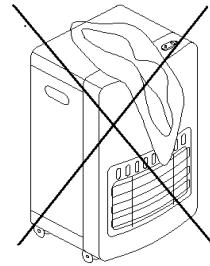


2. DO NOT place clothes or other material on the heater. As apart from danger of fire, their presence could affect the efficiency of the appliance.

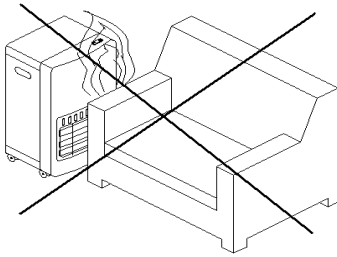


3. DO NOT position Heater close to armchairs , fabrics, bed linen and other furniture.

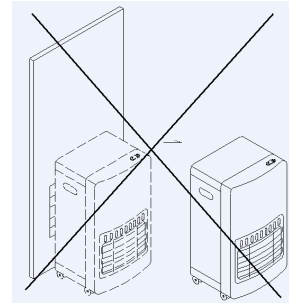

4. DO NOT move Heater from room to room when operating.

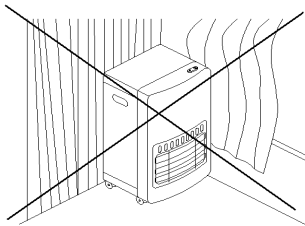

5. DO NOT position Heater alongside a wall or near curtains and other flammable materials. The following minimum distances should be respected: 20cm from sides, 150cm from front. ALWAYS face Heater towards center of room. Special care should be taken if the heater is on a surface where it can twist on its castors if knocked by a child or dog etc.

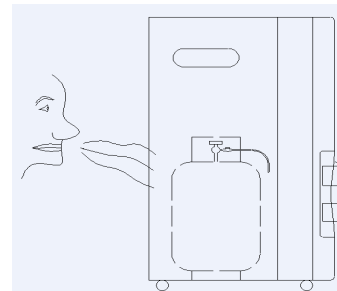

6. In the event of gas leakage, the heater's gas supply need to be turned off.. DO NOT disconnect the regulator. Extinguish all naked lights. Check all connections. Slowly turn the gas on and brush the connections with soapy water or liquid detergents, a gas leakage point will form bubbles. If a leak is found, turn the gas off and inform your gas supplier. DO NOT use the Heater again until it has been checked and maintained by your dealer.

NOTE: READ THE INSTRUCTIONS BEFORE USING THIS APPLIANCE.

VENTILATION: USE ONLY IN A WELL-VENTILATED ROOM.

DO NOT USE IN LEISURE VEHICLES SUCH AS CARAVANS OR AUTOCARAVANS.


DO NOT CHANGE GAS CYLINDER IN THE PRESENCE OF NAKED LIGHT.

THIS APPLIANCE REQUIRES INSTALLATION BY A COMPETENT PERSON THIS APPLIANCE REQUIRES AN APPROVED HOSE AND REGULATOR CHECK WITH YOUR GAS SUPPLIER

TECHNICAL CHARACTERISTICS

Type: **CLGH-42E**

Domestic Flueless Space Heater, mobile, equipped with anti-tilt switch, oxygen depletion system (ODS), flame supervision device, Over heater protection.

Domestic flueless Space heater					
Model		CLGH-42E			
Appliance Category		<input type="checkbox"/> I3+	<input type="checkbox"/> I3B/P	<input type="checkbox"/> I3B/P	<input type="checkbox"/> I3B/P
Burner type		Atmospheric burner			
Size of injector (mm)		0.59	0.59	0.51	0.56
Nominal Supply pressure (mbar)		28-30/37	28-30	50	37
Type of gas		G30/G31	G30	G30	G30
Heat input (kW) (Hs)	Nominal	4.2	4.2	4.2	4.2
	Medium	2.8	2.8	2.8	2.8
	Minimum	1.5	1.5	1.5	1.5
Gas Consumption (g/h)	Maximum	305	305	305	305
	Medium	200	200	200	200
	Minimum	110	110	110	110
Ignition system		Piezo electric ignitor			
Dimensions(cm)		42×49×74.5			
Weight of appliance		10kg			
Gas Container		From 5kg to 11kg [at maximum 32 cm (dia.) x 55 cm (H)]			
Destination countries		BE,FR,IT,IT,LU, IE,GB,GR,PT,ES, CY,CZ,LT,SK,CH ,SI,LV	LU,NL,DK,FI,SE,C Y,CZ,EE,LT,MT,SK, SI,BG,IS,NO,TR,HR ,RO,IT,HU,LV	DE, AT, CH, LU,SK	PL

• For use in Greece, it is required low pressure gas regulator 28-30/37 mbar, as it is mentioned above. For use in other country, consult the above table for the correct pressure that is required.

VENTILATION

Your heater consumes oxygen while it is in operation. For that reason, adequate ventilation should be provided in rooms in which the heater is used. This ensures the removal of products of combustion and allows the entry of replacement air.

Adequate ventilation should considerably reduce the possibility of condensation occurring. The following table shows the smallest sizes of room suitable for each heat setting and the ventilation surface, which should be provided.

REQUIRED VOLUME OF ROOM AND VENTILATION SURFACE:

VOLUME OF LIVING ROOM	VENTILATION SURFACE	
	Low Level	High Level
84 cubic meters	105cm ²	105 cm ²

CONNECTING THE CONTAINER

1. Use an approved regulator according to gas supply pressure and approved tubing having a length of 50cm and in no case longer than 1m. When connecting the regulator to the container avoid twisting of hose.
2. Slowly open the valve of the container and check if there is any gas leakage by brushing the connections with soapy water. **NEVER USE A MATCH!** A gas leakage forms the bubbles. In the event of gas leakage the appliance should be turned off by closing the valve and the regulator disconnected from the bottle.

Place container in its proper space and attach the rear cover.

HOW TO CHANGE LPG CONTAINER


1. Container must be replaced in a flame-free atmosphere.
2. Do not smoke while changing the container.
3. When you needed to replace your empty container, turn off gas container's valve.
4. Make sure that the heater is extinguished completely.
5. Remove the regulator from the empty container.
6. Following the steps described in "Connecting the container" to connect a filled one.

IMPORTANT


1. It is important that all gas connections have been correctly connected to prevent any leakage. Use soapy water instead of a match for gas leakage checking.
2. Put your container always in upright position. Using the container in horizontally laid down position may damage your heater and create serious results.
3. If a newly filled container is used, ignition might impair as there may be some inert gas present in the container. In this case, change the container with another one which is partially used.
4. When you light your heater for the first time or if it has been a long time since you used it last time. Please be noted that first light your heater in open air (garden or balcony). Take your heater inside after 15 minutes operation.
5. Do not use your heater while sleeping.
Do not use your heater in high-rise flats.
Do not use your heater in basements, bathrooms or bedrooms.
6. This appliance requires a hose and a regulator, check with your gas supplier.
Please seek advice from your gas and regulator supplier so as to use correct hose.
The guard on the appliance is to prevent risk of fire or injury from burns and no part of it should be permanently removed.

IT DOES NOT GIVE FULL PROTECTION FOR YOUNG CHILDREN OR THE INFIRM.


CONTROL BUTTON: GAS CONTROL:

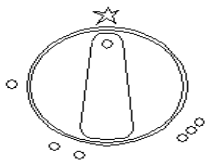


Lighting Position

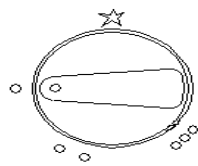

Minimum Position

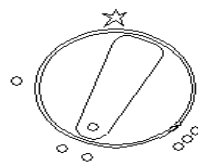

Medium Position

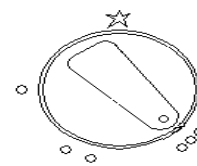

Maximum Position

1. LIGHTING INSTRUCTION

A. The heater has three settings. Lighting position (Pos.1), Minimum position (Pos.2), Medium position (Pos.3) Maximum position (Pos.4).

B. Turn on the gas on the container.

2. LIGHTING:

Use one hand Press down the control button for 10 seconds, at the same time press down the piezo igniter key with thumb finger of another hand. Continue this procedure until pilot is ignited. Approximately 20 seconds later release the control button. At the moment if pilot is ignited, it means that the heater is at its minimum position. If pilot flame goes out, please repeat this procedure.

3. HEAT LEVEL SETTINGS

To change from minimum to medium. Please gently press down the control button and turn it to position 2.

To change from medium to maximum. Please gently press down the control button and turn it to position 3.

4. SWITCHING OFF

Turn off the gas on the container. If the heater will not be used for a period of time, please disconnect the regulator from the container and replace any valve protection plug or cover. If the heater fails to extinguish, please do not disconnect the regulator from the container and remove the heater outdoors and let the gas in the container used up.

Attention!

Please be sure the control button has been locked after you changing the position of control knob followed by the direction of arrow. Control button can't be turned if you haven't pressed it down.

WARNING

1. Read these instructions before using this appliance.
2. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
3. Children being supervised not to play with the appliance.
4. Do not use the heater with a programmer, timer or any other device that switches the heater on automatically.
5. Use an approved regulator which is adjusted to the gas supply pressure required.
6. Do not keep pressing the ignition button for more than 40 seconds.
7. Never disconnect the regulator while container valve is open.
8. Don't change container with in areas in which open fire exists.
9. Don't expose your container to extreme heat area.
10. Don't locate any other container with in the space/room in which your heater is used.
11. Do not insert your finger or any other material through the front panel of the heater.
12. Leave at least 1 meter distance between your heater and the other heat source.
13. Do not let unauthorized persons to interfere with your heater.
14. Do not place appliance under socket outlet.
15. Don't use the heater in surroundings of a bath, shower or swimming pool, leisure vehicles such as caravans or auto caravans.
16. This heater must not be used without a gas container fitted for stability purposes.
17. Do not cover your heater. Fabrics, clothing, hangings, net curtains, bed linens and other flammable materials may ignite if placed against the outlets of your heater.
18. In the event of leakage, the appliance shall be turned off valve and the regulator disconnected from the container.
19. After use, turn off the appliance at the gas valve.
20. Only use in a well ventilated area.
21. Please don't have the children touch the appliance when using heating elements.
22. Switch off the appliance when leaving.
23. In order to avoid overheating, do not cover the heater.

STORAGE

1. Disconnect container.
2. Store container in a well-ventilated area away from combustible material.
Storage should preferably be in an outhouse but must not be in a basement or high-rise flat.
3. The heater should be covered in a dry, dust-free medium in its original package.

CLEANING

1. Use a damp cloth wrung out in a solution of soapy water to clean the exterior and container storage area of your heater.
2. Make sure that no water gets onto the burners or pilot/light area. Wipe the heater completely dry before use.
3. Don't use abrasive cleaners as they may damage the quality paint finish.

MAINTENANCE

2. Check flexible tube between regulator and heater before every operation and replace it if perished, worn or damaged. In any case consider its expiration date to replace the tube
3. It is recommended that the heater is maintained every two years by authorized personnel.

FAULT FINDING CHART

SYMPTOMS	FAULT	REMEDY
1. Pilot will not light automatically.	No spark across electrode gap.	(a) Ensure that pizeo-electric igniter is functioning correctly. (b) Check that electrical lead is not damaged.
2. Pilot will not light automatically but points (a) to (e) are satisfactory and the pilot will light with a match.	Incorrect position of spark in relation to pilot gas flow.	Re-position spark plug so that spark jumps across gas flow.
3. Heater will not remain alight when pressure is released from ignition button.	Electro-magnetic valve closes whilst heater is alight.	(c) Ensure that thermocouple probe is located in pilot flame. (d) Ensure good connection between thermocouple and valve. (e) Check thermocouple. (f) Check electromagnetic valve. (by serviceman)
4. After changing to maximum position with all three plaques alight. One or more plaques appear below normal intensively.	(a) Blocked jets. (b) Partially blocked supply tube.	(a) Remove and clean blocked jet. (b) Remove supply tube, remove jets and blow through the tube.
5. Difficulty in cross lighting from position 1 to position 2 or 3.	(a) Air draught directed away from first plaque. (b) Position of the pilot flame.	(a) Change the location of the appliance so that it is not adversely affected by air draught. (b) Position pilot so that flame impinges across bottom corner of 2 nd plaque as well as 1 st plaque.
6. Smell of combustion.	Missing piece of ceramic fireclay.	Inspect perimeter of each plaque and locate place where some fireclay has been displaced. Turn to the local service.

REPAIR TO BE CONDUCTED BY AUTHORIZED PERSONNEL ONLY.